

August 2<sup>nd</sup>, 2017


## INSTALL GUIDE – 391-326

### Replacing the Pinch Roller

#### Instructions:

To replace the pinch rollers, proceed as follows:

1. Remove the c-clip at one side.
2. Remove the pinch roller shaft (push against the other side of the shaft).
3. Remove the pinch roller.

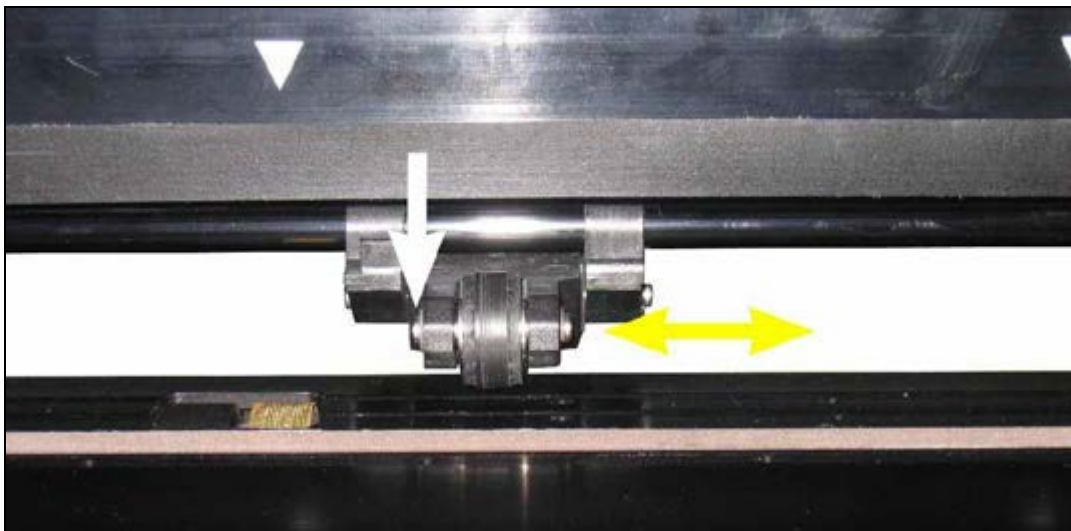

**391-326 Pinch Roller (1) & C-Clips**

#### Note:

- a. Pinch Rollers are sold individually. When one is malfunctioning or broken, both outside pinch rollers need to be replaced.
- b. The models 120 have three, the 140 three and the 160 four pinch rollers. The center pinch rollers are not matched with the two pinch cam rollers and can be installed independently.

To re-install, proceed in the reverse order of removal.